

Optimyst Set Up Instructions



1. Unpack the Optimyst tray and place into the hearth of the suite ensuring the controls are at the front and that the cables are accessible from the back of the suite.
2. Before positioning the suite against the wall, connect the heater unit and the Optimyst using the cables that you have just fed through the bottom the suite.
(Ensure that the cables are in the right orientation before plugging them in.)
3. Connect the thermometer (thin red and black wires) to the tray at the same time.
4. Then slide the tray into the cut out in the suite.
5. Hook the thermostat over the timber heater rail to keep an accurate temperature reading of the room.

Fig. A



Fig. B

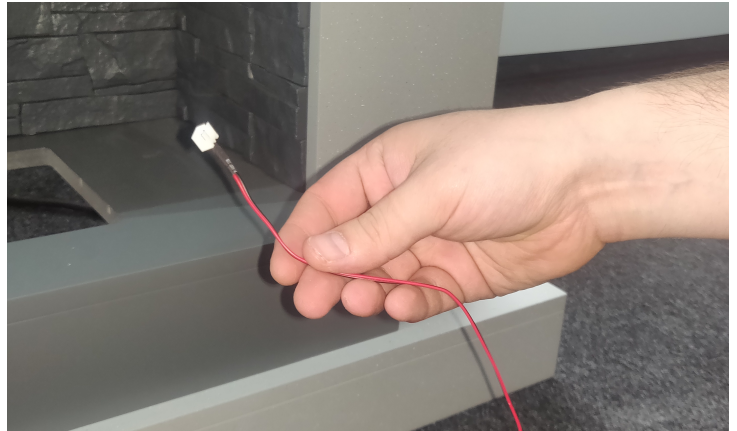


Fig.C

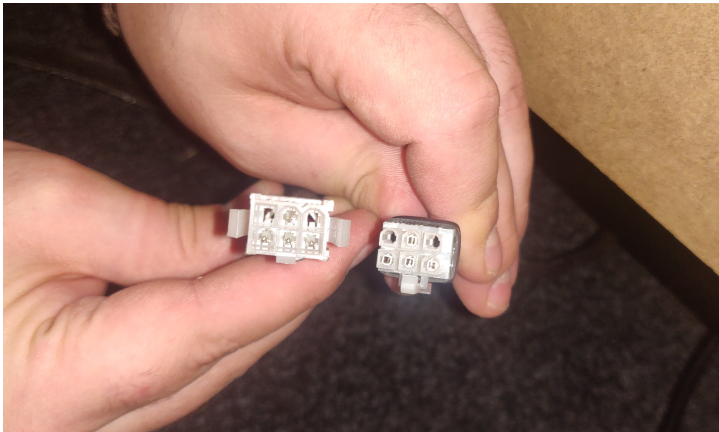


Fig. D



Fig. E

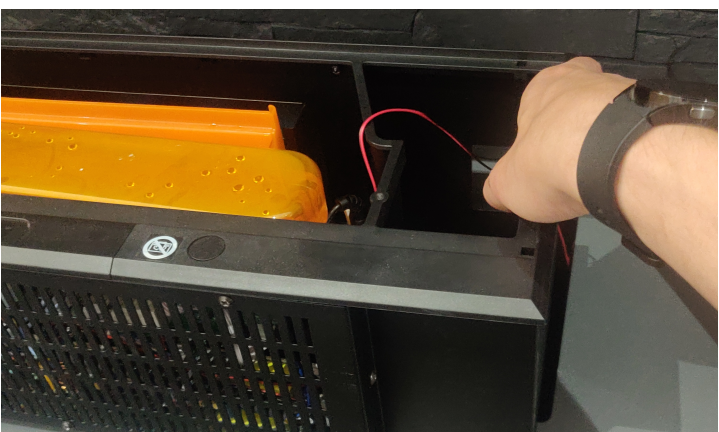


Fig. F



Quick Operation Guide to Optimyst Pro

Turning on the Heater:

- 1) Turn on the fire by holding down **ENTER**.
- 2) To operate the heat, press the down arrow until you come to the **"HANDS"** symbol then press **ENTER**.
- 3) The remote should state a temperature. If the temperature stated on the remote is higher than the current room temperature, then the heater will come on e.g. if the remote is 19° and the room temperature 21° then the heater will not come on. To adjust the heat temperature, use the arrows on the remote
- 4) If the remote states **OFF**, then hold down **ADV** until **HILO** is activated and flashing. Press **ENTER** for the heat to work. Then revert back to step 3.
- 5) To turn the heater off press **ENTER** on the **"HANDS"** setting. Pressing **BACK** means the heater will remain on
- 6) To turn the flame effect off press **ENTER** on the main screen.

Pairing a remote:

- 1) Switch off the appliance with the main switch.
- 2) Activate the remote control with the **ENTER** button.
- 3) If the display shows **"PAIR"**, go to step 8, if not continue with the next step.
- 4) Press the left and right buttons for 5 to 8 seconds.
- 5) The display shows "Fr y".
- 6) Press the **ENTER** button.
- 7) The display shows **"PAIR"**.
- 8) Switch on the appliance at the main switch and hold the remote control close to the unit.
- 9) When **"PAIR"** flashes, press the button and the remote control connected.